



WP Aer Spring Kit

Installation Manual



1) Unload th fork's pressure



2) Unscrew the bottom cap




3) Empty all the fork's oil



4) Remove the inferior bolt



5) Remove the cartridge from the fork

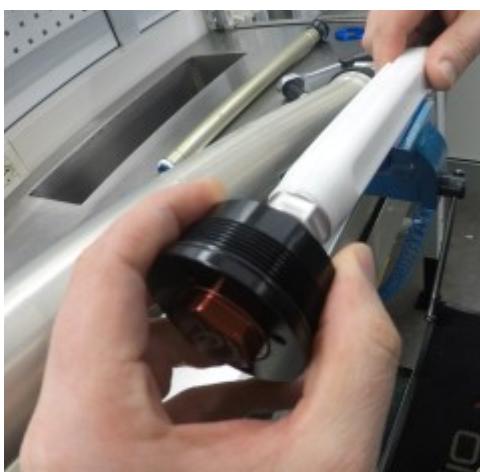


6) Take the Spring Kit and completely
tighten the withe spring spacer on the 12
mm rod, to separate it from the preload cap




7) Completely unscrew the upper cap



8) Insert the Spring Kit on the fork

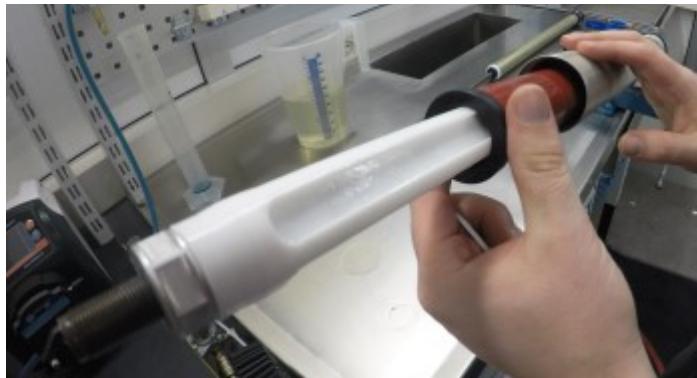

9) Insert the red and black spring spacer

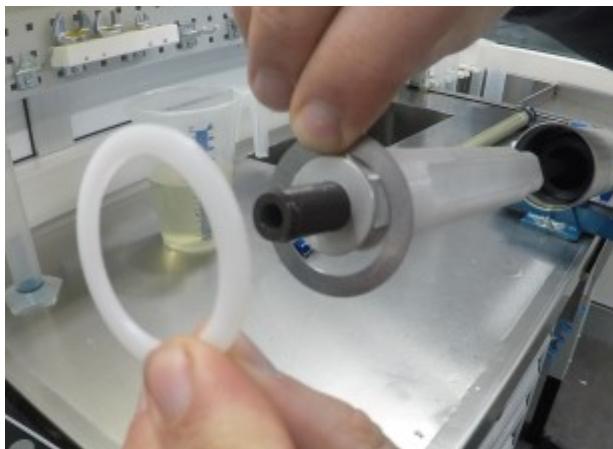

10) Now insert the steel spacer and then the plastic ones



11) Insert the spring



12) Completely unscrew the hexagon spring preload



13) Tighten the cartridge cap on the 12 mm rod



14) Close the locknut and the withe spring spacer on the cartridge cap



15) Put 200 ml of oil. We recommend to use the CUBE Fork Oil



16) Close the cartridge cap on the sheath



17) Regulate the spring preload with the desired load